

B0001	Veh Speed Info Circ Range/Perf	B1712	Mirror Right-Down Control Switch Circ Low
B0005	In Park Switch Circ	B1735	Seat Front Up Switch Circ
B0012	Pass Frontal Deployment Loop Stage 2 Resistance Low	B1740	Seat Front Down Switch Circ
B0013	Pass Frontal Deployment Loop Stage 2 Open	B1745	Seat Rear Up Switch Circ
B0014	Pass Frontal Deployment Loop Stage 2 Volt Out of Range	B1750	Seat Rear Down Switch Circ
B0016	Pass Frontal Deployment Loop Stage 1 Resistance Low	B1755	Seat Assembly Horizontal Forward Switch Circ
B0017	Pass Frontal Deployment Loop Stage 1 Open	B1760	Seat Assembly Horizontal Rearward Switch Circ
B0018	Pass Frontal Deployment Loop Stage 1 Volt Out of Range	B1815	Seat Recline Forward Switch Circ
B0022	Driver Frontal Deployment Loop Stage 1 Resistance Low	B1820	Seat Recline Rearward Switch Circ
B0024	Driver Frontal Deployment Loop Stage 1 Volt Out of Range	B1825	Seat Recline Pos Sensor Circ
B0026	Driver Frontal Deployment Loop Stage 1 Open	B1826	Seat Recline Pos Sensor Circ Range/Perf
B0028	Right Front Side Deployment Loop Resistance Low	B2355	Seat Front Vertical Pos Sensor Circ
B0029	Right Front Side Deployment Loop Open	B2356	Seat Front Vertical Pos Sensor Circ Range/Perf
B0030	Right Front Side Deployment Loop Volt Out of Range	B2365	Seat Rear Vertical Pos Sensor Circ
B0040	Left Front Side Deployment Loop Resistance Low	B2366	Seat Rear Vertical Pos Sensor Circ Range/Perf
B0041	Left Front Side Deployment Loop Open	B2375	Seat Assembly Horizontal Pos Sensor Circ
B0042	Driver Frontal Deployment Loop Stage 2 Resistance Low	B2376	Seat Assembly Horizontal Pos Sensor Circ Range/Perf
B0043	Driver Frontal Deployment Loop Stage 2 Volt Out of Range	B2455	Cellular Phone Microphone Circ
B0044	Driver Frontal Deployment Loop Stage 2 Open	B2462	Global Posing System (GPS) Signal Error
B0045	Left Front Side Deployment Loop Volt Out of Range	B2470	Cellular Phone Antenna Circ
B0051	Deployment Commanded	B2476	Cellular Phone Select Service Switch
B0053	Deployment Commanded with Loop DTCs Present	B2482	Cellular Phone Select Service Switch Perf
B0057	Right Front Pretensioner Deployment Loop Resistance Low	B2483	Global Posing System (GPS) Sensor Circ Low
B0058	Right Front Pretensioner Deployment Loop Open	B2484	Global Posing System (GPS) Sensor Circ Open
B0059	Right Front Pretensioner Deployment Loop Volt Out of Range	B2510	Steering Column Lock Motor Unlock Circ
B0064	Left Front Pretensioner Deployment Loop Resistance Low	B2515	Steering Column Lock Motor Feedback Circ
B0065	Left Front Pretensioner Deployment Loop Open	B2517	Left Front Door Latch Circ
B0066	Left Front Pretensioner Deployment Loop Volt Out of Range	B2518	Right Front Door Latch Circ
B0077	Driver Side Impact Sensor (SIS) Perf	B2527/8	Front Fog Lamps Circ Low/high
B0078	Pass Side Impact Sensor (SIS) Perf	B2530/40	Front/rear Foglamps Control Circ
B0079	Incorrect Driver Side Impact Sensor (SIS) Installed	B2567	Under hood Lamp Control Circ Low
B0080	Discard Driver Side Impact Sensor (SIS)	B2573	Trunk/Hatch Lamp Control Circ High
B0081	Incorrect Pass Side Impact Sensor (SIS) Installed	B2580	Headlamp High Beam Control Circ
B0082	Discard Pass Side Impact Sensor (SIS)	B2625	Display Dimming Pulse Width Modulation (PWM) Output Circ
B0083	Right Front Seat Pos Sensor Circ	B2710	Gearshift Lock Circ
B0084	Left Front Seat Pos Sensor Circ	B2757	Memory 1 Select Switch Circ Low
B0090	Active Switch Volt Out of Range	B2762	Memory 2 Select Switch Circ Low
B0091	Active Switch: Wrong State	B2853	Telescope Forward Switch Circ High
B0100	Front End Sensor 1 Perf	B2858	Telescope Rearward Switch Circ High
B0101	Discard Front End Sensor 1	B2860	Telescope Pos Sensor
B0102	Incorrect Front End Sensor 1 Installed	B2873	Tilt Up Switch Circ High
B0103	Front End Sensor 2 Perf	B2878	Tilt Down Switch Circ High
B0104	Discard Front End Sensor 2	B2897	Steering Column Lock Motor Lock Circ
B0105	Incorrect Front End Sensor 2 Installed	B2907	Steering Column Lock Motor Enable Relay Circ
B0159	Outside Air Temp Sensor Circ	B2910	Steering Column Lock Password Incorrect
B0164	Pass Compartment Temp Sensor Circ	B2981	Right Front Door Handle Switch Circ
B0174	Output Air Temp Sensor 1	B3089	Content Theft System Intrusion Sensor Signal Circ
B0179	Output Air Temp Sensor 2	B3119	Keyless Entry Antenna 1 Perf
B0184	Solar Load Sensor 1 Circ Perf	B3120	Keyless Entry Antenna 2 Perf
B0189	Solar Load Sensor 2 Circ Perf	B3121	Keyless Entry Antenna 3 Perf
B0248	Air Flow Control 3 Circ	B3122	Keyless Entry Antenna 4 Perf
B0249	Air Flow Control 3 Circ Range	B3142	Left Front Unlock Switch Circ Low
B0268	Air Flow Control 7 Circ	B3145	Right Front Unlock Switch Circ Low
B0269	Air Flow Control 7 and Circ Range	B3152	Left Front Lock Switch Circ Low
B0408	Temp Control 1 Circ	B3155	Right Front Lock Switch Circ Low
B0409	Temp Control 1 Circ Range	B3170	Right Front Window Up Switch Circ
B0419	Temp Control 2 Circ Range	B3175	Right Front Window Down Switch Circ
B0423	Temp Control 2 Circ	B3205	Left Front Window Motor Circ
B0510	Output Air Temp Sensor 3	B3280	Right Front Window Express Up or Down Circ
B0515	Output Air Temp Sensor 4	B3377	Left Front Window Up Switch Circ Low
B0976	Power Mode OFF Indicator Circ	B3382	Left Front Window Down Switch Circ Low
B0977	Power Mode START Indicator Circ	B3387	Right Front Window Up Switch Circ Low
B0978	Power Mode ACCESSORY Indicator Circ	B3392	Right Front Window Down Switch Circ Low
B1000	Electronic Control Unit (ECU) Perf	B3467	Left Front Window Express Up or Down Circ Low
B1001	Option Configuration Error	B3472	Right Front Window Express Up or Down Circ Low
B1004	Keep Alive Memory (KAM) Reset	B3542	Left Front Window Obstruction Sensor Control Circ
B1007	EEPROM Write Error	B3602	Convertible Top Control Switch
B1009	EEPROM Checksum Mismatch	B3618	Exterior Trunk Release Switch Circ Low
B1011	System Disabled Info Stored	B3619	Head-Up Display (HUD) Change Page Switch Circ
B1013	Calibration Read Only Memory (ROM) Checksum Error	B3620	Head Up Display (HUD) Info Up Switch Circ
B1014	Program Read Only Memory (ROM) Checksum Error	B3621	Head Up Display (HUD) Info Down Switch Circ
B1259	Antenna Ground Circ	B3634	Head Up Display (HUD) Dimming (Up) Switch Circ
B1271	Theft Locked	B3659	Head Up Display (HUD) Dimming Down Switch Circ
B1291	Convertible Top Fifth Bow Pos	B3666	Rear Tonneau Pos Error
B1325	Device Power 1 Circ Volt	B3667	Tonneau Release Circ
B1327/8	Device Power 1 Circ Low/high	B3670	Pump Motor Temp Sensor Circ
B1336	Device Power 3 Circ Range/Perf	B3715	Front Wiper Relay Drive Circ
B1370	Device Ignition 1 (ON and START) Circ	B3744	Head Up Display (HUD) Mode Switch Circ
B1420	Device Volt	B3794	Cruise Control Function Request Circ
B1440	Power Mode Master Input Circs Mismatch	B3810	Headlamp Washer Relay Circ
B1451	Accessory Power Circ	B3848	Interior Door Handle Switch Circ
B1474	Right Front Exterior Door Handle Switch Circ	B3849	Left Front Exterior Door Handle Switch Circ
B1480	Battery Rundown Protection Circ	B3948	Left Front Turn Signal Circ
B1580	Left Front Mirror Horizontal Pos Sensor Circ	B3949	Right Front Turn Signal Circ
B1590	Left Front Mirror Vertical Pos Sensor Circ	B3950	Left Rear Turn Signal Circ
B1600	Mirror Motor 1 (vertical) Circ	B3951	Right Rear Turn Signal Circ
B1605	Mirror Motor 2 (horizontal) Circ	B3971	Folding Top Pos Sensor
B1697	Mirror Left-Up Control Switch Circ Low	C0035	Left Front Wheel Speed Sensor Circ
B1702	Mirror Left-Down Control Switch Circ Low	C0040	Right Front Wheel Speed Sensor Circ
B1707	Mirror Right-Up Control Switch Circ Low	C0045	Left Rear Wheel Speed Sensor Circ

C0050	Right Rear Wheel Speed Sensor Circ	P0203	Injector 3 Control Circ
C0110	Pump Motor Circ	P0204	Injector 4 Control Circ
C0136	Base Brake System Pres Circ	P0205	Injector 5 Control Circ
C0137	Base Brake System Pres Circ Range	P0206	Injector 6 Control Circ
C0161	(ABS)/Traction Control (TCS) Brake Switch Circ	P0207	Injector 7 Control Circ
C0179	System Thermal High	P0208	Injector 8 Control Circ
C0186	Lateral Accelerometer Circ	P0218	Trans Fluid OverTemp
C0196	Yaw Rate Circ	P0220	Throttle Pos (TP) Sensor 2 Circ
C0220	Left Front (ABS) Channel in Release Too Long	P0222	Throttle Pos (TP) Sensor 2 Circ Low Volt
C0221	Right Front (ABS) Channel in Release Too Long	P0223	Throttle Pos (TP) Sensor 2 Circ High Volt
C0228	Left Rear (ABS) Channel in Release Too Long	P0230	Fuel Pump Relay Control Circ
C0229	Right Rear (ABS) Channel in Release Too Long	P0300	Engine Misfire Detected
C0240	PCM Traction Control Not Allowed	P0315	Crankshaft Pos (CKP) System Variation Not Learned
C0242	PCM Indicated TCS Malfunction	P0325	Knock Sensor (KS) Circ
C0249	Left Normal Force Error	P0326	Knock Sensor (KS) Perf
C0250	Right Normal Force Error	P0327	Knock Sensor (KS) 1 Circ Low Frequency
C0252	Veh Stability System (VSES) Sensors Uncorrelated	P0332	Knock Sensor (KS) 2 Circ Low Frequency
C0253	Centering Error	P0335	Crankshaft Pos (CKP) Sensor Circ
C0267	Low Brake Fluid Indicated	P0336	Crankshaft Pos (CKP) Sensor Perf
C0277	Brake Pedal Pos Sensor Circ	P0340	Camshaft Pos (CMP) Sensor Circ
C0278	Brake Pedal Pos Sensor Not Calibrated	P0341	Camshaft Pos (CMP) Sensor Perf
C0281	Dynamic Rear Proportioning (DRP) Perf	P0351	Ignition Coil 1 Control Circ
C0550	Electronic Control Unit (ECU) Perf	P0352	Ignition Coil 3 Control Circ
C0551	Option Configuration Error	P0353	Ignition Coil 3 Control Circ
C0558	Calibration Data Not Programmed	P0354	Ignition Coil 4 Control Circ
C0561	System Disabled Info Stored	P0355	Ignition Coil 5 Control Circ
C0565	Veh Identification Number (VIN) Info Error	P0356	Ignition Coil 6 Control Circ
C0575	Left Front Solenoid/Motor/Actuator Circ	P0357	Ignition Coil 7 Control Circ
C0580	Right Front Solenoid/Motor/Actuator Circ	P0358	Ignition Coil 8 Control Circ
C0585	Left Rear Solenoid/Motor/Actuator Circ	P0420	Catalyst System Low Efficiency Bank 1
C0590	Right Rear Solenoid/Motor/Actuator Circ	P0430	Catalyst System Low Efficiency Bank 2
C0615	Left Front Pos Sensor Circ	P0442	Evaporative Emission (EVAP) System Small Leak Detected
C0620	Right Front Pos Sensor Circ	P0443	Evaporative Emission (EVAP) Purge Solenoid Control Circ
C0625	Left Rear Pos Sensor Circ	P0446	Evaporative Emission (EVAP) Vent System Perf
C0630	Right Rear Pos Sensor Circ	P0449	Evaporative Emission (EVAP) Vent Solenoid Control Circ
C0696	Pos Sensor Overcurrent (5-volt supply)	P0451	Fuel Tank Pres (FTP) Sensor Perf
C0710	Steering Pos Signal	P0452	Fuel Tank Pres (FTP) Sensor Circ Low Volt
C0750	Left Front Low Tire Pres Sensor	P0453	Fuel Tank Pres (FTP) Sensor Circ High Volt
C0755	Right Front Low Tire Pres Sensor	P0454	Fuel Tank Pres (FTP) Sensor Circ Intermittent
C0760	Left Rear Low Tire Pres Sensor	P0455	Evaporative Emission (EVAP) System Large Leak Detected
C0765	Right Rear Low Tire Pres Sensor	P0461	Fuel Level Sensor 1 Perf
C0820	EBCM Case Volt	P0462	Fuel Level Sensor 1 Circ Low Volt
C0870	Device Volt Reference Output 1 Circ	P0463	Fuel Level Sensor 1 Circ High Volt
C0895	Device Volt	P0464	Fuel Level Sensor Circ Intermittent
C0899	Device 1 Volt Low	P0496	Evaporative Emission (EVAP) System Flow During Non-Purge
C0900	Device 1 Volt High	P0502	Veh Speed Sensor (VSS) Circ Low Volt
C1241	Steering Assist Control Actuator Circ	P0503	Veh Speed Sensor (VSS) Circ Intermittent
P0016	Crankshaft Pos (CKP)-Camshaft Pos (CMP) Correlation	P0506	Idle Speed Low
P0030	HO2S Heater Control Circ Bank 1 Sensor 1	P0507	Idle Speed High
P0036	HO2S Heater Control Circ Bank 1 Sensor 2	P0521	Engine Oil Pres (EOP) Sensor Perf
P0050	HO2S Heater Control Circ Bank 2 Sensor 1	P0522	Engine Oil Pres (EOP) Sensor Circ Low Volt
P0056	HO2S Heater Control Circ Bank 2 Sensor 2	P0523	Engine Oil Pres (EOP) Sensor Circ High Volt
P0068	Throttle Body Airflow Perf	P0531	A/C Refrigerant Pres Sensor Perf
P0101	Mass Air Flow (MAF) Sensor Perf	P0532	A/C Refrigerant Pres Sensor Circ Low Volt
P0102/3	Mass Air Flow (MAF) Sensor Circ Low/high Frequency	P0533	A/C Refrigerant Pres Sensor Circ High Volt
P0106	Manifold Absolute Pres (MAP) Sensor Perf	P0562	System Volt Low
P0107/8	Manifold Absolute Pres (MAP) Sensor Circ Low/high Volt	P0563	System Volt High
P0112/3	Intake Air Temp (IAT) Sensor Circ Low/high Volt	P0572	Brake Switch Circ 1 Low Volt
P0116	Engine Coolant Temp (ECT) Sensor Perf	P0573	Brake Switch Circ 1 High Volt
P0117/8	Engine Coolant Temp (ECT) Sensor Circ Low/high Volt	P0575	Cruise Control Switch Signal Circ
P0120	Throttle Pos (TP) Sensor 1 Circ	P0601	Control Module Read Only Memory (ROM)
P0121	Throttle Pos (TP) Sensor 1 Perf	P0601	Trans Control Module (TCM) Read Only Memory (ROM)
P0122/3	Throttle Pos (TP) Sensor 1 Circ Low/high Volt	P0602	Control Module Not Programmed
P0128	Coolant (ECT) Below Thermostat Regulating Temp	P0602	Trans Control Module (TCM) Not Programmed
P0131	HO2S Circ Low Volt Bank 1 Sensor 1	P0603	Control Module Long Term Memory Reset
P0132	HO2S Circ High Volt Bank 1 Sensor 1	P0603	Trans Control Module (TCM) Long Term Memory Reset
P0133	HO2S Slow Response Bank 1 Sensor 1	P0604	Control Module Random Access Memory (RAM)
P0134	HO2S Circ Insufficient Activity Bank 1 Sensor 1	P0604	Trans Control Module (TCM) Random Access Memory (RAM)
P0135	HO2S Heater Perf Bank 1 Sensor 1	P0606	Control Module Internal Perf
P0136	HO2S Circ Bank 1 Sensor 2	P0607	Control Module Perf
P0137	HO2S Circ Low Volt Bank 1 Sensor 2	P0608	Veh Speed Output Circ
P0138	HO2S Circ High Volt Bank 1 Sensor 2	P060E	Control Module Throttle Pos (TP) System Perf
P0140	HO2S Circ Insufficient Activity Bank 1 Sensor 2	P060D	Control Module Accel Pedal Pos (APP) System Perf
P0141	HO2S Heater Perf Bank 1 Sensor 2	P0615	Starter Relay Control Circ
P0151	HO2S Circ Low Volt Bank 2 Sensor 1	P0621	Generator L-Terminal Circ
P0152	HO2S Circ High Volt Bank 2 Sensor 1	P0622	Generator F-Terminal Circ
P0153	HO2S Slow Response Bank 2 Sensor 1	P0641	5-Volt Reference 1 Circ
P0154	HO2S Circ Insufficient Activity Bank 2 Sensor 1	P0646	A/C Clutch Relay Control Circ Low Volt
P0155	HO2S Heater Perf Bank 2 Sensor 1	P0647	A/C Clutch Relay Control Circ High Volt
P0156	HO2S Circ Bank 2 Sensor 2	P0650	Malfunction Indicator Lamp (MIL) Control Circ
P0157	HO2S Circ Low Volt Bank 2 Sensor 2	P0651	5-Volt Reference 2 Circ
P0158	HO2S Circ High Volt Bank 2 Sensor 2	P0654	Engine Speed Output Circ
P0160	HO2S Circ Insufficient Activity Bank 2 Sensor 2	P0685	Engine Controls Ignition Relay Control Circ
P0161	HO2S Heater Perf Bank 2 Sensor 2	P0689/90	Engine Controls Ignition Relay Feedback Circ Low/High Volt
P0171	Fuel Trim System Lean Bank 1	P0700	Trans Control Module (TCM) Requested MIL Illumination
P0172	Fuel Trim System Rich Bank 1	P0703	Brake Switch 2 Circ
P0174	Fuel Trim System Lean Bank 2	P0711	Trans Fluid Temp (TFT) Sensor Perf
P0175	Fuel Trim System Rich Bank 2	P0712/3	Trans Fluid Temp (TFT) Sensor Circ Low/High Volt
P0201	Injector 1 Control Circ	P0719	Brake Switch Circ Low Volt
P0202	Injector 2 Control Circ	P0722	Output Speed Sensor Circ Low Volt

P0723 Output Speed Sensor Circ Intermittent
P0724 Brake Switch Circ High Volt
P0741 Torq Conv Clutch (TCC) System - Stuck Off
P0742 Torq Conv Clutch (TCC) System - Stuck On
P0751 1-2 Shift Solenoid (SS) Valve Perf - No First or Fourth Gear
P0752 1-2 Shift Solenoid (SS) Valve Perf - No Second or Third Gear
P0756 2-3 Shift Solenoid (SS) Valve Perf - No First or Second Gear
P0757 2-3 Shift Solenoid (SS) Valve Perf - No Third or Fourth Gear
P0787 3-2 Shift Solenoid (SS) Control Circ Low Volt
P0788 3-2 Shift Solenoid (SS) Control Circ High Volt
P0801 Reverse Inhibit Solenoid Control Circ
P0803 Skip Shift Solenoid Control Circ
P0833 Clutch Pedal Switch 2 Circ
P0894 Trans Component Slipping
P0961 Line Pres Control (PC) Solenoid System Perf
P0973 1-2 Shift Solenoid (SS) Control Circ Low Volt
P0974 1-2 Shift Solenoid (SS) Control Circ High Volt
P0976 2-3 Shift Solenoid (SS) Control Circ Low Volt
P0977 2-3 Shift Solenoid (SS) Control Circ High Volt
P1101 Intake Air Flow System Perf
P1133 HO2S Insufficient Switching Bank 1 Sensor 1
P1134 HO2S Transition Time Ratio Bank 1 Sensor 1
P1153 HO2S Insufficient Switching Bank 2 Sensor 1
P1154 HO2S Transition Time Ratio Bank 2 Sensor 1
P1258 Engine Coolant OverTemp - Protection Mode Active
P1380 Misfire Detected - Rough Road Data Not Available
P1381 Misfire Detected - No Communication With Brake Control Module
P1482 Cooling Fan Speed Output Circ
P1516 Throttle Actuator Control (TAC) Module Throttle Actuator Pos Perf
P1617 Engine Oil Level Switch Circ

P1621 Control Module Long Term Memory Perf
P1621 Trans Control Module (TCM) Long Term Memory Perf
P1630 Theft Deterrent Learn Mode Active
P1631 Theft Deterrent Fuel Enable Signal Not Correct
P1682 Ignition 1 Switch Circ 2
P1810 Trans Fluid Pres (TFP) Pos Switch Circ
P1815 Trans Fluid Pres (TFP) Valve Pos Switch - Start in Wrong Range
P1816 Trans Pres/Valve Pos Switch Indicates Park/Neutral (P/N) with Drive Ratio
P2066 Fuel Level Sensor 2 Perf
P2067/8 Fuel Level Sensor 2 Circ Low/High Volt
P2101 Control Module Throttle Actuator Pos Perf
P2119 Throttle Closed Pos Perf
P2120 Accel Pedal Pos (APP) Sensor 1 Circ
P2122/3 Accel Pedal Pos (APP) Sensor 1 Circ Low/high Volt
P2125 Accel Pedal Pos (APP) Sensor 2 Circ
P2127/8 Accel Pedal Pos (APP) Sensor 2 Circ Low/high Volt
P2135 Throttle Pos (TP) Sensor 1-2 Correlation
P2138 Accel Pedal Pos (APP) Sensor 1-2 Correlation
P2176 Minimum Throttle Pos Not Learned
P2610 Control Module Ignition Off Timer Perf
P2636 Fuel Transfer Pump Flow Insufficient
P2763/4 Torq Conv Clutch (TCC) Pres Control (PC) Solenoid Control Circ High/low Volt
P2769 Torq Conv Clutch (TCC) Enable Solenoid Control Circ Low Volt
P2770 Torq Conv Clutch (TCC) Enable Solenoid Control Circ High Volt
U0001 High Speed CAN Communication Bus
U0101 Lost Communications with Trans Control Module (TCM)
U0121 Lost Communications with Electronic Brake Control Module (EBCM)
U0140 Lost Communication With Body Control Module (BCM)
U1000 Class 2 Data Link
U1017 Lost Communications with Engine Control Module (ECM)
U1024 Lost Communications with Trans Control Module (TCM)
U1040 Lost Communications with Electronic Brake Control Module (EBCM)
U1064 Lost Communications with Body Control Module (BCM)
U1088 Lost Communication with Sensing and Diagnostic Module (SDM)
U1096 Lost Communication with Instrument Panel Cluster (IPC)
U1098 Lost Communications with Head Up Display (HUD)
U1128 Lost Communications with Radio
U1137 Lost Communications with Digital Radio Receiver (DRR)
U1151 Lost Communications with Communication Interface Module (OnStar®)
U1153 Lost Communication with HVAC Control Module
U1160 Lost Communications with Driver Door Module (DDM)
U1161 Lost Communications with Pass Door Module (PDM)
U1164 Lost Communications with Driver Door Switch (DDS)
U1166 Lost Communication with Driver Pos Module (DPM)
U1177 Lost Communications with Folding Top Controller (FTC)
U1193 Lost Communications with Remote Control Door Lock Receiver (RCDLR)
U1194 Lost Communications with Steering Column Lock Control Module (SCLCM)
U1255 Class 2 Data Link
U1300 Class 2 Data Link Low
U1301 Class 2 Data Link High
U1305 Class 2 Data Link Low or High
U1500 Inter-device Dedicated Bus 1
U2100 Controller Area Network (CAN) Bus Communication
U2105 Lost Communication with Engine Control Module (ECM)
U2106 Lost Communication With Trans Control Module (TCM)
U2107 Lost Communication With Body Control Module (BCM)
U2108 Lost Communication With Electronic Brake Control Module (EBCM)
U2112 Lost Communications With Electronic Suspension Control Module (ESC)
U2153 Navigation Electronic Control Unit (ECU) - VICS Communication Circ

<http://www.davidfarmerstuff.com/>

Please support my site via link on Homepage